


Engineering Design and Technology Series

An Introduction to Flow Analysis Applications with SolidWorks Flow Simulation, Student Workbook

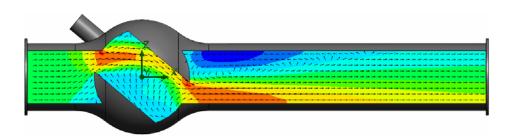

SolidWorks Corporation 300 Baker Avenue Concord, Massachusetts 01742 USA Phone: +1-800-693-9000 Outside the U.S.: +1-978-371-5011 Fax: +1-978-371-7303 Email: info@solidworks.com Web: http://www.solidworks.com/education © 1995-2010, Dassault Systèmes SolidWorks Corporation, a Dassault Systèmes S.A. company, 300 Baker Avenue, Concord, Mass. 01742 USA. All Rights Reserved.

The information and the software discussed in this document are subject to change without notice and are not commitments by Dassault Systèmes SolidWorks Corporation (DS SolidWorks).

No material may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of DS SolidWorks.

The software discussed in this document is furnished under a license and may be used or copied only in accordance with the terms of this license. All warranties given by DS SolidWorks as to the software and documentation are set forth in the SolidWorks Corporation License and Subscription Service Agreement, and nothing stated in, or implied by, this document or its contents shall be considered or deemed a modification or amendment of such warranties.

Patent Notices for SolidWorks Standard, Premium, Educational, and Professional Products

U.S. Patents 5,815,154; 6,219,049; 6,219,055; 6,603,486; 6,611,725; 6,844,877; 6,898,560; 6,906,712; 7,079,990; 7,184,044; 7,477,262; 7,502,027; 7,558,705; 7,571,079; 7,590,497; 7,643,027; 7,672,822; 7,688,318; 7,694,238, and foreign patents, (e.g., EP 1,116,190 and JP 3,517,643). U.S. and foreign patents pending.

Trademarks and Other Notices for All SolidWorks Products

SolidWorks, 3D PartStream.NET, 3D ContentCentral, PDMWorks, eDrawings, and the eDrawings logo are registered trademarks and FeatureManager is a jointly owned registered trademark of DS SolidWorks.

SolidWorks Enterprise PDM, SolidWorks Simulation, SolidWorks Flow Simulation, and SolidWorks 2010 are product names of DS SolidWorks.

CircuitWorks, Feature Palette, FloXpress, PhotoWorks, TolAnalyst, and XchangeWorks are trademarks of DS SolidWorks.

FeatureWorks is a registered trademark of Geometric Ltd.

Other brand or product names are trademarks or registered trademarks of their respective holders.

COMMERCIAL COMPUTER SOFTWARE - PROPRIETARY

U.S. Government Restricted Rights. Use, duplication, or disclosure by the government is subject to restrictions as set forth in FAR 52.227-19 (Commercial Computer Software - Restricted Rights), DFARS 227.7202 (Commercial Computer Software and Commercial Computer Software Documentation), and in the license agreement, as applicable.

Contractor/Manufacturer:

Dassault Systèmes SolidWorks Corporation, 300 Baker Avenue, Concord, Massachusetts 01742 USA

Copyright Notices for SolidWorks Standard, Premium, Educational, and Professional Products

Portions of this software © 1990-2010 Siemens Product Lifecycle Management Software III (GB) Ltd.

Portions of this software © 1998-2010 Geometric Ltd.

Portions of this software © 1986-2010 mental images GmbH & Co. KG.

Portions of this software © 1996-2010 Microsoft Corporation. All rights reserved.

Portions of this software © 2000-2010 Tech Soft 3D.

Portions of this software © 1998-2010 3D connexion.

This software is based in part on the work of the Independent JPEG Group. All Rights Reserved.

Portions of this software incorporate PhysXTM by NVIDIA 2006-2010.

Portions of this software are copyrighted by and are the property of UGS Corp. © 2010.

Portions of this software © 2001 - 2010 Luxology, Inc. All Rights Reserved, Patents Pending.

Portions of this software © 2007 - 2010 DriveWorks Ltd.

Copyright 1984-2010 Adobe Systems Inc. and its licensors. All rights reserved. Protected by U.S. Patents 5,929,866; 5,943,063; 6,289,364; 6,563,502; 6,639,593; 6,754,382; Patents Pending.

Adobe, the Adobe logo, Acrobat, the Adobe PDF logo, Distiller and Reader are registered trademarks or trademarks of Adobe Systems Inc. in the U.S. and other countries.

For more copyright information, in SolidWorks see Help > About SolidWorks.

Other portions of SolidWorks 2010 are licensed from DS SolidWorks licensors.

Copyright Notices for SolidWorks Simulation

Portions of this software © 2008 Solversoft Corporation.

PCGLSS © 1992-2007 Computational Applications and System Integration, Inc. All rights reserved.

Portions of this product are distributed under license from DC Micro Development, Copyright © 1994-2005 DC Micro Development, Inc. All rights reserved.

About This Course

The Introduction to Flow Analysis Applications with SolidWorks Flow Simulation and its supporting materials is designed to assist you in learning SolidWorks Flow Simulation in an academic setting.

Online Tutorials

The Introduction to Flow Analysis Applications with SolidWorks Flow Simulation is a companion resource and is supplemented by the SolidWorks Motion Online Tutorials.

Accessing the Tutorials

To start the Online Tutorials, click **Help, SolidWorks Tutorials, All SolidWorks Tutorials**. The SolidWorks window is resized and a second window will appears next to it with a list of the available tutorials. As you move the pointer over the links, an illustration of the tutorial will appear at the bottom of the window. Click the desired link to start that tutorial.

Conventions

Set your screen resolution to 1280x1024 for optimal viewing of the tutorials.

The following icons appear in the tutorials:

SolidWorks Flow Simulation Student Workbook

Next \bowtie Moves to the next screen in the tutorial.

Represents a note or tip. It is not a link; the information is to the right of the icon. Notes and tips provide time-saving steps and helpful hints.

Vou can click most toolbar buttons that appear in the

lessons to flash the corresponding SolidWorks button. The first time you click the button, an ActiveX control message appears: An ActiveX control on this page might be unsafe to interact_with other parts of the page. Do you want to allow this interaction? This is a standard precautionary measure. The ActiveX controls in the Online Tutorials will <u>not</u> harm your system. If you click **No**, the scripts are disabled for that topic. Click **Yes** to run the scripts and flash the button.



- G Open File or Set this option automatically opens the file or sets the option.
 - **Video example** shows a video about this step.
- **A closer look at...** links to more information about a topic. Although not required to complete the tutorial, it offers more detail on the subject.
- Why did I... links to more information about a procedure, and the reasons for the method given. This information is not required to complete the tutorial.

Printing the Tutorials

If you like, you can print the Online Tutorials by following this procedure:

1 On the tutorial navigation toolbar, click **Show**

This displays the table of contents for the Online Tutorials.

2 Right-click the book representing the lesson you wish to print and select **Print** from the shortcut menu.

The **Print Topics** dialog box appears.

- **3** Select **Print the selected heading and all subtopics**, and click **OK**.
- 4 Repeat this process for each lesson that you want to print.

SolidWorks Simulation Product Line

While this course focuses on the introduction to the rigid body dynamics using SolidWorks Motion Simulation, the full product line covers a wide range of analysis areas to consider. The paragraphs below lists the full offering of the SolidWorks Simulation packages and modules.

Static studies provide tools for the linear stress analysis of parts and assemblies loaded by static loads. Typical questions that will be answered using this study type are: Will my part break under normal operating loads? Is the model over-designed?


Can my design be modified to increase the safety factor?


Buckling studies analyze performance of the thin parts

loaded in compression. Typical questions that will be answered using this study type are:

Legs of my vessel are strong enough not to fail in yielding; but are they strong enough not to collapse due to loss of stability?

Can my design be modified to ensure stability of the thin components in my assembly?

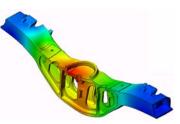



Frequency studies offer tools for the analysis of the natural modes and frequencies. This is essential in the design or many components loaded in both static and dynamic ways. Typical questions that will be answered using this study type are: Will my part resonate under normal operating loads? Are the frequency characteristics of my components suitable

for the given application?

Can my design be modified to improve the frequency characteristics?

Thermal studies offer tools for the analysis of the heat transfer by means of conduction, convection, and radiation. Typical questions that will be answered using this study type are:

Will the temperatures changes effect my model? How does my model operate in an environment with temperature fluctuation?

How long does it take for my model to cool down or overheat? Does temperature change cause my model to expand?

Will the stresses caused by the temperature change cause my product failure (static studies, coupled with thermal studies would be used to answer this question)?

Drop test studies are used to analyze the stress of moving parts or assemblies impacting an obstacle. Typical questions that will be answered using this study type are: What will happen if my product is mishandled during transportation or dropped?

How does my product behave when dropped on hard wood floor, carpet or concrete?

Optimization studies are applied to improve (optimize) your initial design based on a set of selected criteria such as maximum stress, weight, optimum frequency, etc. Typical questions that will be answered using this study type are:

Can the shape of my model be changed while maintaining the design intent?


Can my design be made lighter, smaller, cheaper without compromising strength of performance?


Fatigue studies analyze the resistance of parts and assemblies loaded repetitively over long periods of time. Typical questions that will be answered using this study type are: Can the life span of my product be estimated accurately? Will modifying my current design help extend the product life?


Is my model safe when exposed to fluctuating force or temperature loads over long periods of time?

Will redesigning my model help minimize damage caused by fluctuating forces or temperature?



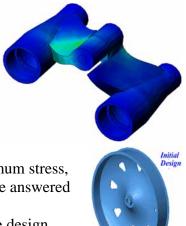

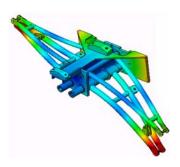

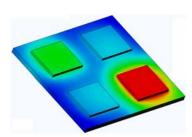



Nonlinear studies provide tools for analyzing stress in parts and assemblies that experience severe loadings and/or large deformations. Typical questions that will be answered using this study type are: Will parts made of rubber (o-rings for example) or foam perform well under given load?

Does my model experience excessive bending during normal operating conditions?

Dynamics studies analyze objects forced by loads that vary in time. Typical examples could be shock loads of components mounted in vehicles, turbines loaded by oscillatory forces, aircraft components loaded in random fashion, etc. Both linear (small structural deformations, basic material models) and nonlinear (large structural deformations, severe loadings and advanced materials) are available. Typical questions that will be answered using this study type are:

Are my mounts loaded by shock loading when vehicle hits a large pothole on the road designed safely? How much does it deform under such circumstances?


Motion Simulation enables user to analyze the kinematic and dynamic behavior of the mechanisns. Joint and inertial forces can subsequently be transferred into SolidWorks Simulation studies to continue with the stress analysis. Typical questions that will be answered using this modulus are:

What is the correct size of motor or actuator for my design? Is the design of the linkages, gears or latch mechanisms optimal? What are the displacemements, velocities and accelerations of the mechanism components?

Is the mechanism efficient? Can it be improved?

Composites modulus allows users to simulate structures manufactured from laminated composite materials. Typical questions that will be answered using this modulus are: Is the composite model failing under the given loading? Can the structure be made lighter using composite materials while not compromising with the strength and safety? Will my layered composite delaminate?












Basic Functionality of SolidWorks Flow Simulation

Goals of This Lesson


Upon successful completion of this lesson, you will be able to understand the basic functionality of SolidWorks Flow Simulation and perform hydraulic analysis to the following part.

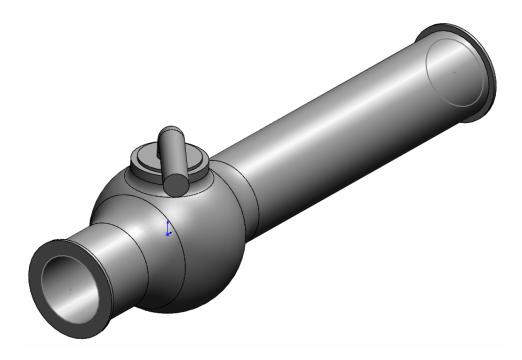

Active Learning Exercise — Determination of Hydraulic Loss

Use SolidWorks Flow Simulation to perform fluid internal analysis on the Valve.SLDPRT part shown to the right.

The step-by-step instructions are given below.

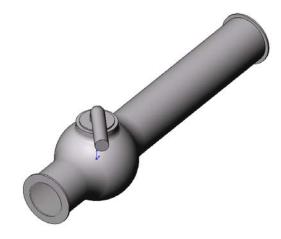


Opening the Valve.SLDPRT Document

1 Click File, Open. In the Open dialog box, browse to the Valve.SLDPRT part located in the corresponding subfolder of the SolidWorks Curriculum_and_Courseware_2009 folder and click Open (or double-click the part).

Checking the SolidWorks Flow Simulation Menu

If SolidWorks Flow Simulation is properly installed, the Flow Simulation menu appears on the SolidWorks menu bar. If not:



1 Click **Tools**, **Add-Ins**.

The **Add-Ins** dialog box appears.

2 Check the checkboxes next to SolidWorks Flow Simulation.


If SolidWorks Flow Simulation is not in the list, you need to install SolidWorks Flow Simulation first.

3 Click **OK**. The Flow Simulation menu appears on the SolidWorks menu bar.

Model Description

This is a ball valve. Turning the handle closes or opens the valve.

The local hydraulic loss (or resistance) produced by a ball valve installed in a piping system depends on the valve design dimensions and on the handle turning angle. The ball-to-pipe diameter ratio governs the handle turning angle at which the valve becomes closed.

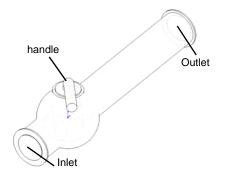

The standard engineering definition of a hydraulic resistance of an obstacle in a pipe is the difference between the total pressures (i.e. where a stream is not disturbed by the obstacle) upstream and downstream of the obstacle (the valve in our case) divided by the incoming dynamic head, from which the hydraulic resistance due to the friction over the pipe section is subtracted.

In this example we will obtain the local hydraulic resistance of the ball valve whose handle is turned by an angle of 40°. The Valve analysis represents a typical SolidWorks Flow Simulation internal analysis.

Note: Internal flow analyses are analyses where fluid enters a model at the inlets and exits the model through the outlets. The exception are some natural convection problems that may not have openings.

To perform an internal analysis all the model openings must be closed with lids, which are needed to specify inlet and outlet flow boundary conditions on them. In any case, the internal model space filled with a fluid must be fully closed. The lids are simply additional extrusions covering the openings. They can be created both manually and automacially; both of the procedures are shown below.


Creating Lids Manually

Creating Inlet Lid

- 1 Select the face shown in the picture.
- 2 Click **Sketch Z** on the Sketch toolbar.

- **3** Select the tube's inner edge.
- 4 Click **Convert Entities ()** on the Sketch toolbar.
- 5 Complete the sketch by clicking **OK** button [€] in the confirmation corner of the graphics area.
- **7** In the **Extrude** Feature PropertyManager change the settings as shown.
 - End Condition = Mid Plane
 - Depth = 0.005m
- 8 Click \checkmark to create the inlet lid.

Next, in the same manner we will create the outlet lid.

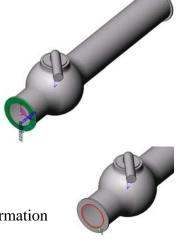



Creating Outlet Lid

- **9** Select the face shown in the picture.
- 10 Click Sketch 📂 on the Sketch toolbar.
- **11** Select the tube's inner edge.
- **12** Repeat the steps 3 to 8 to create the lid at outlet.
- 13 Rename the new extrusions Extrude1 and Extrude2 to
 - Inlet Lid and Outlet Lid, correspondingly.




Not sure you have created the lids properly? SolidWorks Flow Simulation can easily check your model for possible geometry problems.

Checking the Geometry

- 1 To ensure the model is fully closed, click **Flow Simulation**, **Tools, Check Geometry**.
- 2 Click **Check** to calculate the fluid volume of the model. If the fluid volume is equal to zero, the model is not closed properly.

Note: This **Check Geometry** tool allows you to calculate the total fluid and solid volumes, check bodies for possible geometry problems (i.e. tangent contact) and visualize the fluid area and solid body as separate models.

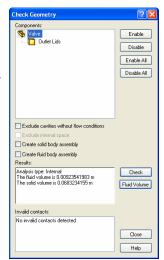

Creating Lids Automatically


The previous step showed the manual lid creation. In the next step you will practise the SolidWorks Flow Simulation automatic lid creation tool. This tool can save considerable amount of time if multiple lids are needed to close the internal volume.

Deleting manually created lids

Delete Inlet Lid and Outlet Lid features.

Creating Inlet and Outlet Lids

1 Click Flow Simulation, Tools, Create Lids. The Create Lids dialog box appears.

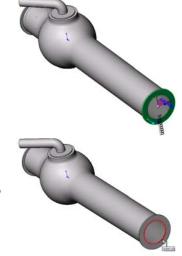

- 2 Select the two inlet and outlet faces shown in the figure.
- 3 Click ✓ to complete the lid definitions.
- 4 Rename the newly created features LID1 and LID2 to Inlet Lid and Outlet Lid, respectively.

Note: In the assembly mode, each newly created lid forms a new part saved in the assembly folder.

The first step in performing flow analysis is to create a SolidWorks Flow Simulation project.


Creating a Project

- 1 Click **Flow Simulation**, **Project**, **Wizard**. The project wizard guides you through the definition of a new SolidWorks Flow Simulation project.
- 2 In the **Project Configuration** dialog box, click **Use current** (40 degrees).

Each SolidWorks Flow Simulation project is associated with a SolidWorks configuration. You can attach the project either to the current SolidWorks configuration or create a new SolidWorks configuration based on the current one. Click **Next**.

3 In the **Unit System** dialog box you can select the desired system of units for both input and output (results).

For this project we accept the default selection of **SI** (International System). Click **Next**.

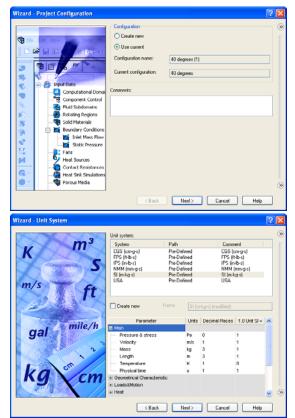

4 In the Analysis Type dialog box you can select either Internal or External type of the flow analysis. This dialog also allows you to specify advanced physical features you want to take into account: heat transfer in solids, surface-to-surface radiation, time-dependent effects, gravity and rotation.

Specify **Internal** type and accept the default values for the other settings. Click **Next**.

- Wizard Analysis Type
 Image: State and state
- 5 In the **Default Fluid** dialog box you can select the fluid type. The selected fluid type is assigned by default for all fluids in the analysis.

Click **Liquids** and then double-click the **Water** item in the **Liquids** list. Leave defaults under **Flow Characteristics** and click **Next**.

	Fluids	Path	^	New
	🖈 Gases			
	😑 Liquids			
	- Acetone	Pre-Defined		
	Ammonia	Pre-Defined		
	Argon	Pre-Defined		
	Ethone	Pre-Defined		
	Ethanol	Pre-Defined		
	Ethylene	Pre-Defined		
	Methane	Pre-Defined		
	Methanol	Pre-Defined		
	Ntropen	Pre-Defined	×	Add
	Project Fluids	Default Fluid		Remove
	Water (Liquids)			
	Flow Characteristic	Value		
Contraction of the second	Flow type	Laninar and Turbulent	_	
1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1	Cavitation			
			_	

Note: The SolidWorks Flow Simulation **Engineering Database** contains physical properties of predefined and user-defined gases, real gases, incompressible liquids, non-Newtonian liquids, compressible liquids, solid substances and porous materials. It includes both constant values and tabular dependencies of various physical parameters on temperature and pressure.

The Engineering Database also contains unit systems, values of thermal contact resistance for various solid materials, properties of radiative surfaces and integral physical characteristics of some technical devices, namely, fans, heat sinks, and thermoelectric coolers. You can easily create your own substances, units, fan curves or specify a custom parameter you want to visualize.

SP (Standard Pressure) means that temperature dependencies of the liquid are taken along the standard isobar P=0.1 MPa.

Vizard - Wall Conditi

6 In the **Wall Conditions** dialog box you can specify the wall roughness value and the wall thermal condition.

In this project we will not deal with the rough walls and heat conduction through the walls, so leave the default settings and click **Next**.

7 In the **Initial Conditions** dialog box specify initial values of the flow

Click Next.

parameters. For steady internal problems, the values specified closer to the expected flow field will reduce the analysis time. For this project use the default values.

Concernation of the second	Parameter	Value	(39)
- ATT	Default wall thermal condition	Adiabatic wall	
	Roughness	0 micrometer	
The second se			
V			
and the second se			
and the second s			
		Dependency	(30)
	< Back Ne	sxt> Cancel Help	
	C Back Ne	w// Cancel Help	
Wizard - Initial Conditions		?	
			-
70 - 20	Parameter	Value)))
60 -	Parameter Definition	User Defined	
50 10	Thermodynamic Parameters		
-040 -	 Parameters; 	Pressure, temperature	
	Parameters: Pressure	Pressure, temperature 101325 Pa	
	Persaure Temperature		
30 0 1 20	Pressure	101325 Pa	
(30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0) (30	Pressure Temperature	101325 Pa 293.2 K	
30 0 1 20	Pressure Temperature Velocity Parameters	101325 Pa	
(30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0) (30	Pressure Temperature Velocity Parameters Parameter: Velocity in X direction	101325 Pa 293.2 K Velocity	
(30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0 (30 0) (30	Pressure Temperature Velocity Parameters Parameter:	101325 Pa 293.2 K Velocity 0 m/s	
30 0 99 20 0 10	Pressure Temperature Velocity Parameters Parameter: Velocity in X direction Velocity in Y direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	
30 0 99 20 0 10	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	
30 0 99 20 0 10	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	
30 0 99 20 0 10	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	
30 0 99 20 0 10	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	
30 0 99 20 0 10	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	
State of the state	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	
	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	
	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	
	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	
	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101335 fa 283 2 K Velocity 0 m/s 0 m/s 0 m/s	
	Pressure Temperature Velocity Parameters Parameters Velocity in X direction Velocity in X direction Velocity in X direction	101325 Pa 203.2 K Velocity 0 m/s 0 m/s	

Note: For steady flow problems SolidWorks Flow Simulation iterates until the solution converges. For unsteady (transient, or time-dependent) problems SolidWorks Flow Simulation marches in time for a period you specify.

8 In the **Results and Geometry Resolution** dialog box you can control the analysis accuracy as well as the mesh settings and, by this, the required computer resources (CPU time and memory).

For this project accept the default **Result** resolution level **3**.

Result resolution governs the solution accuracy that can be interpreted as resolution of calculation results. You specify result resolution in accordance with

Wizard - Results and Geometry Resolu	ution							2	X
	-Result reso	lution							»
× A	1	2) (4	5	6	7	0	ſ
	Minimum g Manua Minimu Minimu Minimu	al specifica m gap siz				on			
	0.04m							0	
	Minimum w	al specifica	ition of th		wall thick				
	Minimum v								
	Advance	d nanow o		finement Finish		stimize thin Cancel		slution Help	>>>

<Back Next> Cancel Help

the desired solution accuracy, available CPU time and computer memory. Because this setting has an influence on the number of generated mesh cells, a more accurate solution requires longer CPU time and more computer memory.

Geometry Resolution (specified through the **Minimum gap size** and the **Minimum wall thickness**) governs proper resolution of geometrical model features by the computational mesh. Naturally, finer geometry resolution requires more computer resources.

Select the **Manual specification of the minimum gap size** check box and enter **0.04 m** for the minimum flow passage.



Note: SolidWorks Flow Simulation calculates the default minimum gap size and minimum wall thickness using information about the overall model dimensions, the computational domain, and faces on which you specify conditions and goals. However, this information may be insufficient to recognize relatively small gaps and thin model walls. This may cause inaccurate results. In these cases, the Minimum gap size and Minimum wall thickness must be specified manually.

Click Finish.

SolidWorks Flow Simulation Design Tree


After the basic part of the project has been created, a new SolidWorks Flow Simulation

design tree tab 👩 appears on the right side of the Configuration Manager tab.

Note: The SolidWorks Flow Simulation Design Tree provides a convenient specification of project data and view of results. You also can use the SolidWorks Flow Simulation design tree to modify or delete the various SolidWorks Flow Simulation features.

At the same time, in the SolidWorks graphics area a computational domain wireframe box appears. The flow and heat transfer calculations are performed inside the computational domain. The computational domain is a rectangular prism for both the 3D and 2D analyses. The computational domain boundaries are parallel to the global coordinate system planes.

Now let us specify the other parts of the project.

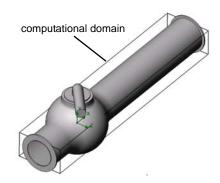

The next step is the specifycation of the boundary conditions. Boundary conditions are used to specify the fluid characteristics at the model inlets and outlets in an internal flow analysis or on model surfaces in an external flow analysis.

Specifying Boundary Conditions

- 1 Click Flow Simulation, Insert, Boundary Condition.
- 2 Select the Inlet Lid inner face (in contact with the fluid). To access the inner face, right-click the lid's outer face and choose **Select Other**. Right-click the mouse to cycle through the faces under the cursor until the inner face is highlighted, then click the left mouse button.

The selected face appears in the **Faces to Apply the**

Boundary Condition 🧊 list.

- 3 In the **Type** group box, click **Flow Openings ⊨** and select the **Inlet Velocity** item.
- 4 In the Flow Parameters group box, click Normal to Face item and set the Velocity Normal to Face value, the units will appear automatically).

Accept all other parameters and click \checkmark .


By specifying this condition we define that the water enters the valve at the ball valve pipe inlet with the velocity of 1.0 m/s.

5 Select the Outlet Lid inner face.


In the graphics area, right-click outside the model and select **Insert Boundary Condition**. The **Boundary Condition** PropertyManager appears with the selected

face in the Faces to Apply the Boundary Condition 🗊 list.


Let us specify pressure on this boundary, otherwise the problem specification is deficient. Before the calculation starts, SolidWorks Flow Simulation checks the specified boundary conditions for mass flow rate balance. The specification of boundary conditions is incorrect if the total mass flow rate on the inlets is not equal to the total mass flow rate on the outlets. In such case the calculation will not start. Also, note that the mass flow rate value is recalculated from the velocity or volume flow rate value specified on an opening. Specifying at least one Pressure opening condition allow us to avoid problems with mass flow rate balance, since the mass flow rate on a Pressure opening is not specified but calculated during the problem solution.

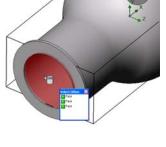



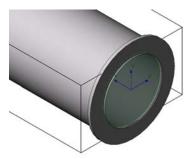

- 6 Click Pressure Openings 🚱 and in the Type of Boundary Condition list select the Static Pressure item.
- 7 Accept the default values for all of the other parameters (101325 Pa for Static Pressure, 293.2 K for the Temperature, for example).
- 8 Click 🖌.

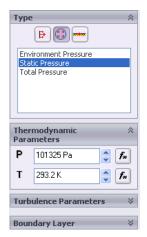

By specifying this condition we define that the water has a static pressure of **1 atm** at the ball valve pipe exit.

The model's hydraulic loss ξ is calculated as the difference between the model's inlet total pressure and the outlet total pressure, ΔP , divided by the dynamic pressure (dynamic head) determined at the model inlet:

$$\xi = (dP) / \frac{\rho V^2}{2} = (dP) / P_{dyn}$$

where P is water density, V is water inlet velocity, P_{dyn} is the dynamic pressure at inlet.

Since we already know the specified water velocity $(1 \frac{m}{s})$ and the water density (998.1934)

 $\frac{kg}{m^3}$ for the specified temperature of 293.2 K), our goal is to determine the total pressure

value at the valve's inlet and outlet.

The easiest and fastest way to find the parameter of interest is to specify the corresponding engineering goal.


Engineering goals are the parameters which the user is interested in. Setting goals is essentially a way of conveying to SolidWorks Flow Simulation what you are trying to get out of the analysis, as well as means of reducing the time SolidWorks Flow Simulation takes to reach a solution. By only selecting the variable which the user desires accurate values for, SolidWorks Flow Simulation knows which variables are important to converge upon (the variables selected as goals) and which can be less accurate (the variables not selected as goals) in the interest of time. Goals can be defined over the entire domain (Global Goals), within a selected volume (Volume Goal), on a selected area (Surface Goal) or at a specific point of the model (Point Goal). Furthermore, SolidWorks Flow Simulation can consider either average, minimum or maximum parameter value to define the goal. You can also define an Equation Goal that is a goal defined by an equation (involving basic mathematical functions) with the existing goals as variables. The equation goal allows you to calculate the parameter of interest (i.e., pressure drop) and keeps this information in the project for later reference.

Specifying Surface Goals

- 1 In the SolidWorks Flow Simulation design tree, rightclick the Goals icon and select Insert Surface Goal.
- 2 Select the inner face of the Inlet Lid.


To easily select a face, simply click the Inlet Velocity 1 item in the SolidWorks Flow Simulation design tree. The face related to the specified boundary condition is automatically selected and appears in the **Faces to Apply the Surface Goal** list.

3 In the Parameter list, find Total Pressure. Click in the Av column to use the average value and keep selected Use for conv. to use this goal for the convergence control.

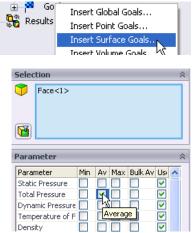

Note: To see the parameter names more clearly, you will probably find useful to enlarge the PropertyManager area by dragging the vertical bar to the right.

- 4 Click 🖌.
- 5 In the SolidWorks Flow Simulation design tree click-pause-click the new SG Av Total Pressure 1 item and rename it to SG Average Total Pressure Inlet.



Note: Another way to rename an item is to right-click the item and select **Properties**.

- 6 Right-click the Goals icon again and select Insert Surface Goal.
- 7 Click the Static Pressure 1 item in the SolidWorks Flow Simulation design tree to select the inner face of the Outlet Lid.
- 8 In the Parameter list, find Total Pressure.
- 9 Click in the Av column and then click
- 10 Click-pause-click the new SG Av Total Pressure 1 item and rename it to SG Average Total Pressure Outlet.
- 11 Right-click the Goals icon again and select Insert Surface Goal.
- 12 Click the Inlet Velocity 1 item to select the inner face of the Inlet Lid.
- 13 In the Parameter list, find Dynamic Pressure.
- 14 Click in the Av column and then click \checkmark .
- **15** Click-pause-click the new SG Average Dynamic Pressurel item and rename it to SG Average Dynamic Pressure Inlet.



The value of the dynamic pressure at the inlet can be calculated manually. We have specified the dynamic pressure goal just for the convenience of the further calculation of hydraulic losses.

After finishing the calculation you will need to manually calculate the hydraulic loss ξ from the obtained total pressures values. Instead, let SolidWorks Flow Simulation make all the necessary calculations for you by specifying an Equation Goal.

Specifying the Equation Goal

Equation Goal is a goal defined by an analytical function of the existing goals. This goal can be monitored during the calculation and while displaying results in the same way as the other goals. Any of the existing goals can be used as variables, including other equation goals, except those that are dependent on other equation goals. You can also use constants in the definition of the equation goal.

- 1 Right-click the Goals icon and select **Insert Equation Goal**. The **Equation Goal** dialog box appears.
- **2** Click the left bracket button [or type "(".
- 3 In the Goals list select the SG Average Total Pressure Inlet goal. The goal is then automatically added in the **Expression** field.
- 4 Click the minus button or type "-".
- 5 In the Goals list select the SG Average Total Pressure Outlet goal.



(ISG Average Total Pressure Inlet)-{SG Average Total Pressure Outlet)}/{SG Average Dynamic Pressure Inlet)		Undo Add
	2	Clear
7 8 9 + [log		
4 5 6 . 1 cos		
1 2 3 · ^ sin		
0 E . / exp tan		
Dimensionality.		
No units 💌		
Use the goal for convergence control		

- 6 Click the right bracket) and the forward slash / buttons, or type ")/".
- 7 In the Goals list select the SG Average Dynamic Pressure Inlet goal name.
- 8 In the **Dimensionality** list select **No units**.

Note: To set an Equation Goal you can use only existing goals (including previously specified Equation Goals) and constants. If constants signify some physical parameters (i.e. length, area etc.) make sure of using the project's system of units. SolidWorks Flow Simulation has no information about the physical meaning of the specified constants so you need to specify the displayed dimensionality manually.

9 Click **OK**. The Equation Goal 1 item appears in the tree.

10 Rename it to Hydraulic Loss.

Now the SolidWorks Flow Simulation project is ready for the calculation. SolidWorks Flow Simulation will finish the calculation when the steady-state average value of total pressure calculated at the valve inlet and outlet are reached.

Running the Calculation

- 1 Click Flow Simulation, Solve, Run. The Run dialog box appears.
- 2 Click **Run** to start the calculation.

The calculation should take about 2 minutes to run on a 2.26 GHz Pentium M computer.

SolidWorks Flow Simulation automatically generates a computational mesh in accordance with your settings of Result resolution and Geometry resolution. The mesh is created by dividing the computational domain into cells, i.e. elementary rectangular volumes. The cells are further subdivided as necessary to resolve properly the model geometry and flow features. This process is called mesh refinement. During the mesh generation procedure, you can see the current step

Mesh Generation: 40 degr le Calculation View Insert W		स)				
> 0 x m (8				
i) Log				O teto		
Message	Iterations	Date		Parameter	Value	
Mesh generation started		14:09:10 , Mar 23		Fluid cells	2713	
tesh generation normally finished		14:09:15 , Mar 23		Partial cells Cou time	3766	
				Calculation time left		
				Status	Mesh generation finished normally.	
			_			
			_			
			_	c		3
				Warning		Comment
				No warnings		
			-			
				2		

and the mesh information in the Mesh Generation dialog box.

Monitoring the Solver

This is the solution monitor dialog box. To the left you may see the stepwise log of the solution process. The information dialog box arranged to the right contains summary information on the mesh and any warnings on different issues that may arise during the analysis.

During the calculation you can monitor the convergence behavior of your goals (Goal Plot), view the current results in the specified plane (Preview) and display the minimum and maximum parameter values at the current iteration (Min/Max table).

Solver: 40 degrees(Valve.S le Calculation View Insert W	indow Help				
нн 2- С 🖈 🗎 🕻 П Log) PA <u>18</u> • •		- X 0 ====		
Nerskap Meh generation started Yerkingeneration normally finaled Yerkingenergista far Goldadon Galadation started	Derations 0	Date 140010, Mar 23 140010, Mar 23 1400105, Mar 23 140020, Mar 23 140020, Mar 23 140020, Mar 23	Parameter Plata cels Plata cels Breador fin Cel de ador fin Travell Breadors jor 11 Coloue Coloues ten int Status	00:00:00 0.221081 40 0:0:4	
			1 C.		
			Werning No wernings		Connect

	Solve Solve Continue calculation Continue calculation
on a	CPU and memory usage Run at: This computer (CAD section) Use CPU(a) Results processing after finishing the calculation P Load results Batch Results

Close

Help

Creating Goal Plot

- 1 Click Insert Goal Plot in on the Solver toolbar. The Add/Remove Goals dialog box appears.
- 2 Click Add All to check all goals and click OK.

This is the Goal Plot dialog box. All added goals together with their current values are listed at the top part of the window, as well as the current progress towards completion given as a percentage. The progress value is only estimate and generally (but not necessarily) increases with time. Below you can see the graph of all goals.

Convergence is an iterative process. The discretization of the flow field imposes conditions on each parameter and each parameter cannot

reach an absolutely stable value but will oscillate near this value from iteration to iteration. When SolidWorks Flow Simulation analyzes the goal's convergence, it calculates the goal's dispersion defined as the difference between the goal's maximum and minimum values over the analysis interval reckoned from the last iteration and compares this dispersion with the goal's convergence criterion dispersion, either specified by you or automatically determined by SolidWorks Flow Simulation. Once the oscillations are less than the convergence criterion the goal becomes converged.


Preview Results


1 While the calculation is still running, click **Insert**

Preview is on the Solver toolbar. The **Preview Settings** dialog box appears.

- 2 Click the FeatureManager tab 🕵.
- **3** Select Plane 2.

For this model Plane 2 is a good choice to use as the preview plane. The preview plane can be chosen anytime from the Feature Manager.

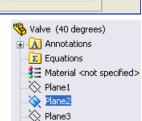

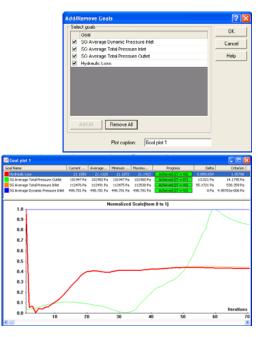

Settings Image Attributes Options Region

Contour

Velocity vector

Plane offset

Auto min

OK Cancel

Help

4 Click **OK** to display the preview plot of the static pressure distribution.

Note: You can specify a parameter you want to display in the preview plane, the parameter range and display options for velocity vectors at the **Setting** tab of the **Preview Settings** dialog box.

The preview allows one to look at the results while the calculation is still running. This helps to determine if all the boundary conditions are correctly defined and gives the user idea of how the solution will look even at this early stage.



At the start of the run the results might look odd or change abruptly. However, as the run progresses these changes will lessen and the results will settle in on a converged solution. The result can be displayed either in contours, isolines or vector representation.

- **Note:** Why does the static pressure increase at the local region inside the valve? This is due to a deceleration (up to stagnation within a small region) of the stream impacting the valve's wall in this region, so the stream's dynamic pressure is partly transformed into the static pressure while the stream's total pressure is nearly constant in this region, so the static pressure rises.
- 5 When the solver is finished, close the monitor by clicking File, Close.

Accessing the Results

Expand the Results folder in the project tree by clicking the corresponding (+) sign.

Note: When the solver is finished, the results are loaded automatically (unless the **Load results** check box in the **Run** window has been unchecked). However, when working with a previously calculated project, you need to load the results manually by clicking **Flow Simulation**, **Results**, **Load/Unload Results**.

Once the calculation finishes, you can view the saved calculation results in numerous ways and in a customized manner directly within the graphics area. The Result folder features functions that may be used to view your results: Cut Plots (section views of parameter distribution), 3D-Profile Plots (section views in relief representation), Surface Plots (distribution of a parameter on a selected surface), Isosurfaces, Flow Trajectories, Particle Studies (particle trajectories), XY Plots (diagrams of parameters behavior along a curve or sketch), Point Parameters (getting parameters at specified points), Surface Parameters (getting parameters at specified surfaces), Volume Parameters (getting parameters within specified volumes), Goals (behavior of the specified goals during the calculation), Reports (export of project report output into MS Word) and Animation of results.

Creating a Cut Plot

1 Right-click the Cut Plots icon and select Insert. The Cut Plot dialog box appears.

The Cut Plot displays results of a selected parameter in a selected view section. To define the view section, you can use SolidWorks planes or model planar faces (with the additional shift if necessary). The parameter values can be represented as a contour plot, isolines, vectors, or in a combination (e.g. contours with overlaid vectors).

- 2 Click the SolidWorks FeatureManager and select Plane2. Its name appears in the Section Plane or Planar Face list on the Selection tab.
- 3 In the **Cut Plot** PropertyManager window, in addition to displaying **Contours ≥**, click **Vectors ≥**.
- In the Vectors group box, using the slider set the Vector Spacing
 to approximately 0.012 m.
- 5 Click **View Settings** in order to specify the parameter which will be shown in the contour plot.



¥ect	01'5	~
×	0.012 m	*
	-0	
*,	Uniform plot	
°%)	Gradient plot	
ð,		

- **Note:** The settings made in the **View Settings** dialog box refer to all cut plots, surface plots, isosurfaces and flow trajectories specific features. These settings are only applied for the active pane of the SolidWorks graphics area. For example, the contours in all cut and surface plots will show the same physical parameter selected in the **View Settings** dialog box. So, in the **View Settings** dialog box for each of the displaying options (contours, isolines, vectors, flow trajectories, isosurfaces) you specify the displayed physical parameter and the settings required for displaying it through this option. The contour settings can also be applied to isolines, vectors, flow trajectories and isosurfaces.
- 6 On the **Contours** tab, in the **Parameter** box select **X-Velocity**.
- 7 Click OK to save changes and close the ViewSettings dialog box.
- 8 Click v to create the cut plot. The new Cut Plot 1 item appears in the SolidWorks Flow Simulation design tree.

iew Settings				? 🛛
Isosurfaces Contours Settings Parameter:	Options Isolines	Coordinate Sy: Vectors	stem 3D-Pr Flow Trajector	 OK Apply
Min: -1.557723 Max: 4.2315560 Palette:		-1.55772389 m/s 4.23155604 m/s Palette 6		Open Save As Reset Min/Max Parameter List
Number of colors	: 10			Cancel Help

However, the cut plot is not seen through the model. In order to see the plot, you can hide the model by clicking **Flow Simulation**, **Results**, **Display**, **Geometry** (alternatively, you can use the standard SolidWorks **Section View** option) or change the model transparency (as is done in the next step below).

9 Click the Flow Simulation, Results, Display, Geometry to show the model. Click Flow Simulation, Results, Display, Transparency and drag the slider to set the value of approximately 0.85.

Click 🖌.


- Model Transparency
 Image: Comparency

 Value to set:
 0.85

 OK
 Cancel
- **10** In the SolidWorks Flow Simulation design tree, right-click the Computational Domain icon and select **Hide**.



Now you can see a contour plot of the velocity and the velocity vectors projected on the plot.

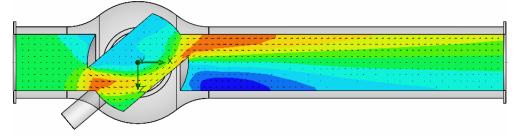


For better visualization of the vortex you can scale small vectors:

11 In the SolidWorks Flow Simulation design tree, rightclick the Results icon and select **View Settings**.




- 12 In the View Settings dialog, click the Vectors tab and type **0.02 m** in the Arrow size box.
- 13 Change the Min value to 2 m/s.

By specifying the custom **Min** we change the vector length so the vectors whose velocity is less than the specified Min value will have the same length as the vectors whose velocity is equal to the Min. This allows us to visualize the low velocity area in more details.

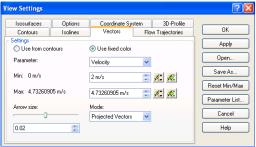

14 Click **OK** to save the changes and exit the **View Settings** dialog box. Immediately the cut plot is updated.

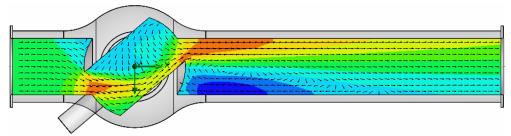


Displaying Flow Trajectories

With the use of **Flow trajectories** you can show the flow streamlines. Flow streamlines provide a very clear and comprehensible representation of the flow peculiarities. You can also see how parameters change along each trajectory by exporting data into Excel. Additionally, you can save trajectories as SolidWorks reference curves.


Right-click the Cut Plot 1 icon and select Hide.

- 1 Right-click the Flow Trajectories icon and select **Insert**. The **Flow Trajectories** dialog box appears.
- 2 In the SolidWorks Flow Simulation Design Tree, click the Static Pressure 1 item to select the inner face of the Outlet Lid. Trajectories launched from the outlet opening will better visualize the vortex occurring downstream the valve's obstacle.
- 3 Set the Number of trajectories to 50.
- 4 Click the **Setting** tab and decrease the **Maximum length** of trajectories to **2 m**.
- 5 Click **OK** to display trajectories.
- 6



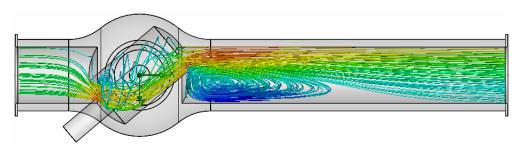

Some may prefer to display the flow trajectories with the help of a section plot. Use Plane2 to define a section plot to show the flow trajectories.

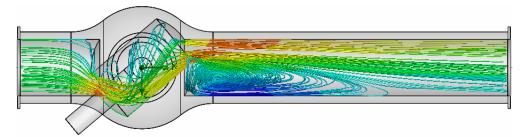


Rotate the model to examine the 3D structure of the vortices in more detail.


Creating a Goal Plot

The Goal Plot allows you to study the goal changes in the course of the calculation. SolidWorks Flow Simulation uses Microsoft Excel to display the goal plot data. Each goal plot is displayed in a separate sheet. The converged values of all project goals are displayed in the Summary sheet of an automatically created Excel workbook.

1 In the SolidWorks Flow Simulation design tree, under Results, right-click the Goals icon and select **Insert**. The **Goals** dialog box appears.



- 2 Click Add All.
- 3 Click **OK**. The goals1 Excel workbook is created.

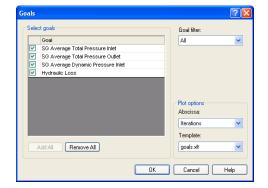

This workbook displays how the goal values had changed during the calculation. You can take the total pressure value presented in the Summary sheet.

Valve.SLDPRT [40 degrees]

Goal Name	Unit	Value	Averaged Value	Minimum Value	Maximum Value	Progress [%]	Use In Convergence	Delta	Criteria
SG Average Total Pressure	[Pa]	112270.2791	112275.2008	112268.6415	112294.8531	100	Yes	26.21163269	543.7731616
SG Average Total Pressure	[Pa]	101968.6227	101976.6097	101968.6227	101996.0177	100	Yes	27.39501123	29.72826268
SG Average Dynamic Pres	[Pa]	498.7808697	498.7808697	498.7808697	498.7808697	100	Yes	0	4.98781E-06
Hydraulic loss	[]	20.65367186	20.64752624	20.62365726	20.66256681	100	Yes	0.03890955	1.076820996

Cloning Project

The current calculation yields the total hydraulic resistance ξ including both valve's hydraulic resistance ξv (due to the obstacle) and the tubes' hydraulic resistance due to friction $\xi_f: \xi = \xi v + \xi_f$. To obtain the valve's resistance, it is necessary to subtract from the obtained data the total pressure loss due to friction in a straight pipe of the same length and diameter. To do that, we will perform the same calculations in the ball valve model whose handle is turned by an angle of 0° .

You can create a new SolidWorks Flow Simulation project in three ways:

- The Project Wizard is the most straightforward way of creating a SolidWorks Flow Simulation project. It guides you step-by-step through the analysis set-up process.
- To analyze different flow or model variations, the most efficient method is to clone (copy) your current project. The new project will have all the settings of the cloned project, optionally including the results settings.
- You can create a SolidWorks Flow Simulation project by using a Template, either a default template or custom template created from a previous SolidWorks Flow Simulation project. Template contains only general project settings (the settings you specify in the Wizard and General Settings only) and does not contain the other project features like boundary conditions, goals, etc.

The easiest way to create a new SolidWorks configuration for 0° angle and specify the same condition as the 40° angle project is to clone the existing **40 project**.

- 1 Click Flow Simulation, Project, Clone Project.
- 2 Click Create New.
- 3 In the **Configuration name** box, type 00 degrees.
- 4 Click OK.

Clone Project 🔹 💽
 Create new
 Add to existing
Configuration name:
00 degrees
Existing configuration:
00 degrees 🗸
Copy results
OK Cancel Help

Now the new SolidWorks Flow SimulationSolidWorks Flow

Simulation project is attached to the new 00 degrees configuration and has inherited all the settings from the 40 degrees project. All our input data are copied, so we do not need to redefine them. All changes will only be applied to this new configuration, not affecting the old project and its results.

Changing the Valve Angle

- 1 In the SolidWorks FeatureManager, right-click the Angle Definition feature and select Edit Feature.
- 2 In the At angle box, type90.
- 3 Click OK 🖌 .

		i 🔆 Ar	ngle Definition X	?
Axis1		Selec	tions	~
Angle Dr	ure (Angle Definition)	7	Axis1	
🕂 🕞 Boss-Ext	<u>3</u> D Sketch On Plane		Plane1	
🗉 间 Cut-Extr	Section View			
🗄 💽 Boss-Ex	Live Section			
	Parent/Child		Through Lines/Points	
🗄 🧲 Boss-Sw 🎼	Configure feature			
🗄 🏟 Boss-Re 🗙	Delete		Parallel Plane at Point	
Plane7	Add to New Folder		90.00deg	×

After clicking **OK**, two warning messages appear asking you to rebuild the computational mesh and to reset the computational domain.


Flow Simulation 2009	Flow	w Simulation 2009
Flow Simulation has detected that the model was modified. Do you want to reset mesh s Note: Pressing "Yes" is highly recommended but you have to start the computation from was not changed. Continuation of the calculation with the modified geometry will produc Yes No	he beginning. Press "No" if you are sure that the geometry	The geometry of the model or project settings have been changed. Do you want to reset the computational domain? Yes No

4 Answer **Yes** to the both messages.

Changing the Geometry Resolution


Since at the zero angle the ball valve becomes a simple straight pipe, there is no need to set the **Minimum gap size** value smaller than the default gap size which, in our case, is automatically set equal to the pipe's diameter (the automatic minimum gap size depends on the characteristic size of the faces on which the boundary conditions are set). Note that using a smaller gap size will result in a finer mesh which, in turn, will require more CPU time and memory. To solve your task in the most effective way you should choose the optimal settings for the task.

- 1 Click Flow Simulation, Initial Mesh.
- 2 Clear the Manual specification of the minimum gap size check box.
- 3 Click OK.

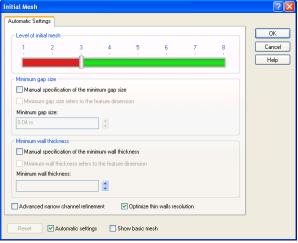

Changing the Computational Domain

You can take advantage of the symmetry of the straight pipe to reduce the CPU time and memory requirements for the computation. Since the flow is symmetric at two directions (Y and Z), it is possible to "cut" the model in one fourth and use a symmetry boundary condition on the planes of symmetry. This procedure is not required but is recommended for efficient analyses.

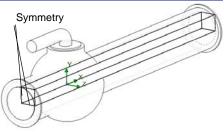

Note: The symmetric conditions can be applied only if you are sure that the flow is symmetric. Note that sometimes symmetry of both the model and the incoming flow does not guarantee symmetry in other flow regions, e.g. a von Karman vortex street behind a cylinder. In our case, the flow in the straight pipe is symmetric so we can reduce the computational domain.

1 In the SolidWorks Flow Simulation design tree right-click the Computational Domain [] icon and select Edit Definition. The Computational Domain dialog box appears.

In the Computational Domain dialog box you can perform the following:

- Resize the **Computational Domain**.
- Apply the **Symmetry** boundary condition. The flow symmetry planes can be utilized as computational domain boundaries with specified **Symmetry** conditions on them. In this case, the computational domain boundaries must coincide with the flow symmetry planes.

- Specify a **2D** plane flow. If you are fully confident that the flow is a 2D plane flow, you can redefine the computational domain from the default 3D analysis to a 2D plane flow analysis that results in decreases in memory and CPU time requirements. To activate a 2D planar analysis, select **2D** plane flow on the **Boundary Condition** tab.
- 2 In the **Y** min box type **0**.
- 3 In the **Z** min box type **0**.
- 4 Click the **Boundary Condition** tab.

Size Boun	dary Condition Color Setti	ng	
X min:	-0.243465 m	*	ОК
X max:	0.723465 m	*	Cancel
Y min:	0 m	•	Help
Y max:	0.0553040859 m	•	
Z min:	0 m	•	
Z max:	0.0553040859 m	\$	
	Res		

- 5 In the At Y min and At Z min lists select Symmetry.
- 6 Click OK.
- 7 Click Flow Simulation, Solve, Run. Then click Run to start the calculation.

Size Boundary	Condition Color S	etting	_
2D plane flow:	None	~	ОК
At X min:	Default	*	Cancel
At X max:	Default	~	Help
At Ymin:	Symmetry	~	
At Ymax:	Default	~	
At Z min:	Symmetry	~	
At Z max	Default	~	

Getting the Valve's Hydraulic Loss

After the calculation is finished, close the monitor dialog box and create the goal plot with the newly obtained results.

Valve.SLDPRT [00 degrees]

	Unit	Value	Averaged Value	Minimum Value	Maximum Value	Progress [%]	Use In Convergence	Delta	Criteria
SG Average Total Pressure	[Pa]	101905.9009	101913.4966	101905.9009	101940.1773	100	Yes	34.27637043	149.6592868
SG Average Total Pressure	[Pa]	101811.8221	101811.9443	101810.101	101812.656	100	Yes	2.554935328	2.91454975
SG Average Dynamic Press	[Pa]	498.7808697	498.7808697	498.7808697	498.7808697	100	Yes	0	4.98781E-06
Hydraulic loss	0	0.188617473	0.203601043	0.188617473	0.26078832	100	Yes	0.072170847	0.299347039

Now you can calculate the valve's hydraulic loss in the ball valve whose handle is turned

by 40° . To determine the parameter's steady-state value more accurately, it would be more accurate to use the values averaged over the analysis interval, which are shown in the Averaged Value column.

Total hydraulic losses (40 deg)	Friction losses (0 deg)	Valve's loss
20.6	0.20	20.4

Save Your Work and Exit SolidWorks

1 Click 🔚 on the Standard toolbar or click **File**, **Save**.

Click File, Exit on the Main menu.

5 Minute	e Assessment – Answer Key
1	What is SolidWorks Flow Simulation?
2	How do you start a SolidWorks Flow Simulation session?
3	What is a fluid flow analysis?
4	Why analysis is important?
5	What kind of analyses is typical for SolidWorks Flow Simulation internal flow analyses?
6	What is the specific requirement of SolidWorks Flow Simulation internal analyses?
7	How can you ensure the model is closed?
8	Why is it necessary to add lids to the ball valve model openings?
9	What is the first step to start a SolidWorks Flow Simulation analysis?
10	In what ways can a SolidWorks Flow Simulation project be created?
11	How do you specify a fluid for a project?

12 How does a user define a fluid entering the model with a velocity of 1 m/s

13	3 The model has a mirror symmetry. Is it OK then to use the Symmetry	boundary
	condition at the model's symmetry plane?	

14 How do you define a 2D XY plane flow analysis?

15 Is it necessary to specify project goals to start the calculation?

16 How do you start a calculation?

- **17** In the case when you are working with the previously calculated project, what needs to be done first before viewing the result information?
- **18** What display features are available in SolidWorks Flow Simulation to view the calculation results?

19 How can you calculate the total pressure value for a steady state incompressible fluid?

20 What is the definition of the total hydraulic resistance (loss) of an obstacle in a pipe?

Project — Hydraulic Loss Due to Sudden Expansion

When the fluid passes through ball valve it undergoes two sudden contractions and two sudden expansions. Let us employ SolidWorks Flow Simulation to calculate the hydraulic loss in the simple 2D channel with the sudden expansion.


Tasks

1 Open the Bilateral expansion channel.sldprt file in the part located in the corresponding subfolder of the SolidWorks


Curriculum_and_Courseware_2009 folder.

The model is a shell so it is fully closed (the front face on the picture at the right is made transparent to view the results). Therefore, there is no need to create lids.

For easy selection, check that the **Enable** selection through transparency option is enabled under the **Display/Selection** page of the **System Options** dialog box, accessible by clicking **Tools**, **Options**.

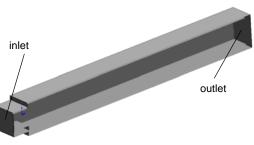


- 2 Using the Wizard, create the SolidWorks Flow Simulation project for internal water analysis with the Result resolution level set to 5 (all other settings are default).
 <u>Answer:</u> Do the following:
- **3** Specify that water with the velocity of 1 m/s enters the model through the inlet opening. What is the mass flow rate of the incoming water in this case?



4 Specify that water exits the model through the outlet opening to an area of static atmosphere pressure. What is the value of the ambient static atmosphere pressure in Pa? Specify static atmosphere pressure at this



5 Specify 2D XY plane flow analysis.

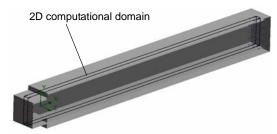


It is known from hydrodynamics that channels with a sudden expansion generate hydraulic

resistance to the flow due to a loss of flow energy caused by vortices in the vortex region downstream of the sudden expansion. Naturally, these regions add to the hydraulic resistance caused by the wall friction as well.

To consider the hydraulic resistance due to the sudden expansion only, let us replace in the calculations the channel's real walls by the "Ideal Walls" boundary condition option in SolidWorks Flow Simulation, which applies adiabatic frictionless walls. As a result, any wall friction will be absent (of course, this can be done in calculations only and it is impossible in physical experiments). The wall friction's influence on the generated vortices, and therefore on the sudden expansion hydraulic resistance, will be neglected for this analysis.

6 Specify the Ideal Wall boundary condition at the channel's walls (colored in green).

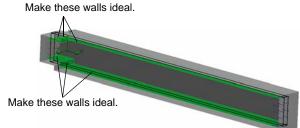

7 Specify the Total Pressure and Dynamic Pressure surface goals at inlet.

- 8 Specify the Total Pressure surface goal at outlet.
- **9** Specify the Equation goal calculating the total hydraulic loss.

10 Run the calculation.

11 Plot the velocity distribution along the channel.

12	Obtain the hydraulic loss caused by the model's sudden expansion by	viewing the
	equation goal average value.	

Lesson 1 Vocabulary Worksheet

Name	Class:	Date:	

Fill in the blanks with the proper words.

- 1 The fluid flow equations solved by SolidWorks Flow Simulation:
- 2 The method used for solving these equations with SolidWorks Flow Simulation:
- **3** The method used for solving time-independent problems with SolidWorks Flow Simulation:
- 4 The process of subdividing the model into small pieces:
- **5** Splitting mesh cells into smaller ones to better resolve a solid/fluid interface or solution behavior:
- 6 The feature that allows users to track the convergence of a flow parameter(s) in a SolidWorks Flow Simulation project:
- **7** The physical feature which must be selected in SolidWorks Flow Simulation to initiate temperature calculation in solids:
- 8 The physical feature which must be selected in SolidWorks Flow Simulation to obtain a time-dependent solution:
- **9** The physical feature which must be selected in SolidWorks Flow Simulation to calculate a flow with significant supersonic regions:
- **10** The physical feature which must be selected in SolidWorks Flow Simulation to properly calculate a heat convection and/or mixing fluids in low-velocity flows not in weightlessness:
- 11 The physical feature which must be selected in SolidWorks Flow Simulation to fully suppress any flow turbulence in the computational domain:
- **12** The SolidWorks Flow Simulation approach of specifying a distributed resistance to a fluid flow:
- 13 Liquids whose viscosity depends on flow velocity gradients:

Lesson 1 Quiz

Name:	Class:	Date:
	010001	2 400

Directions: Answer each question by writing the correct answer or answers in the space provided.

- 1 What is the specific requirement in SolidWorks Flow Simulation for internal analyses?
- 2 What if the fluid used in my design is not defined in the Engineering Database?
- **3** What is the reason for specifying goals in a project?

4 Why is it important to specify the proper minimum gap size?

- 5 How does a user define a fluid exiting the model at static atmospheric pressure?
- 6 After obtaining the results you intend to recalculate after changing a boundary condition's value. Do you have to regenerate the computational mesh?

7 Can you obtain intermediate results during the calculation?

- **8** How do you load results?
- 9 You have specified a goal. How can you see the goal value after finishing the calculation?

10 When can the symmetry condition be applied?

11 What causes hydraulic losses in a pipeline?